Cisco SPA5xx IP Phone PBX setup

November 4, 2021

1. Find the IP address of your phone by looking for your phone in the list under your AREDN node's Port Forwarding, DHCP, And Services tab. It will be listed under the "Current DHCP Leases" list

Node Status	Basic Setup	Port Forwarding, DHCP, and Services	<u>Tunnel</u> <u>Server</u>	<u>Tunnel</u> <u>Client</u>	Administration	<u>Advan</u> Configur
		Help Save Changes	Reset Values R	efresh		
Hostname	DHCP Address Reservations IP Address MAC Addres IP Address - Current DHCP Leases there are no active leases	ISS Do Not Propagate	Name Link	Advertised URL ://[VE7LSE-WOODE	I Services	
Interf	Port Forward Outside	ling AN IP LAN	Alia	DNS Aliase s Name	IP Address	
WAN	▼ TCP ▼ - IP Ac	Idress - V		[-	IP Address - 🖌 Add	
		Part of the AREDN™ Project. F	or more details please <u>see here</u>			
	VE7LSE-PHONE	10.46.174.181	4c:00:82:5	91:32:cc	Add	

• 1 C	ISCO						IP P C	hone isco S	e SPA525	G2	
Voic	• v	/i-Fi	Bluet	ooth	Pers	onal Ad	dress Bo	ook	Call History	Speed Dials	Firmware Upgrade
Info	System	Phone	Ext 1	Ext 2	Ext 3	Ext 4	Ext 5	User			
									Attend	ant Console Status	Admin Login basic advanced
Conno IP Sta Doma	ection Type: tus: in:		D O Ic	HCP K cal.mest	1			Curre Host	ent IP: Name: ent Netmask:	10.46.: VE7LSE 255.25	174.181 E-PHONE 5.255.224
Curre Secor	nt Gateway dary DNS:	:	1	0.46.174	.161			Prima	ary DNS:	10.46.	174.161
Bluet	oth Enable oth Connec	d: ted:	N N	a.pool.nt 0 0	p.org			Bluet	ooth Firmware Ve ooth MAC:	ersion: 0.00.34	4
Conne Wirele	ected Device ess Connect	e ID: ed:	N	0				Wirel Wirel Stand	ess Enabled: ess MAC: dard Channel:	No 4C:00: Auto so	82:91:32:CC

2. Open a web browser and enter you phone's IP address.

3. Click on Admin login then the advanced tab

cisco							IP Ph Ci	sco S	e SPA525 ystems, Inc.	G 2		
Voice	w	/i-Fi	Bluet	ooth	Pers	onal Ad	dress Bo	ok	Call History	Speed Dials	Firmware Upgrade	
Info	System	Phone	Ext 1	Ext 2	Ext 3	Ext 4	Ext 5	User				
									6.00 m			
									Attend	ant Console Status	Admin Login Dasic advanced	
Syster	n Informa	tion										
Connec	tion Type:		D	НСР				Curre	ent IP:	10.46.1	174.181	
IP Stat	us:		0	к				Host	Name:	VE7LSE	-PHONE	
Domai	n:		lo	cal.mes	h			Curre	ent Netmask:	255.25	5.255.224	
Curren	t Gateway:		1	0.46.174	4.161			Prima	ary DNS:	10.46.1	.174.161	
Second	lary DNS:											
Primar	y NTP Serv	er:	Ca	a.pool.nt	tp.org			Seco	ndary NTP Server	1		
Blueto	oth Enabled	d:	N	0				Bluet	ooth Firmware Ve	ersion: 0.00.34	1	
Blueto	oth Connec	ted:	N	0				Bluet	ooth MAC:			
Connec	cted Device	e ID:						Wirel	ess Enabled:	No		
Wireles	ss Connect	ed:	N	0				Wirel	ess MAC:	4C:00:	82:91:32:CC	
SSID:								Stand	dard Channel:	Auto so	an	
Securit	y Mode:											
Reboo	t History											
Reboot	Reason 1:		P	rovisioni	ng(10/3	1/2021	23:40:12) Rebo	ot Reason 2:	Provisio	oning(10/31/2021 23:39:4	
Reboot	Reason 3:		P	rovisioni	ng(08/1	0/2021	16:31:03) Rebo	ot Reason 4:	Provisio	oning(08/10/2021 16:19:1	

4. Click on "System" Tab and enter a host name you want for your phone and change the NTP server as shown. You can also setup an admin password if you like.

Info	System	SIP	Provisi	ioning	Regional	Phone	Ext 1	Ext 2	Ext 3	Ext 4	Ext 5	User	Att Cor	nsole	TR-0	69	
												1	ala Ciatas	Herei		Les die	
											Atte	indant Cons	sole Status	User	Login	basic	advanced
Syste	em Configui	ration															
Restri	cted Access	Doma	ains:														
Enable	e Web Serve	en:	У	/es 💙				We	b Server	Port:		80					
Enable	e Web Admi	n Acce	ess: y	/es 🗸				Adı	min Pass	word:		***	******	***			
User F	Password:							Use	er Web Pa	assword	l:						
SPA52	25-protocol:		5	SIP 💙				SP/	A525-aut	o-detec	t-sccp:	yes	~				
SPA52	25-readonly:	:	r	10 💙				Pho	one-UI-u	ser-mod	le:	no	~				
WiFi U	Jser Access	Mode:	У	/es 💙													
_																	
Power	r Settings																
PoE Po	ower Requir	ed:	1	Vormal	~												
Intor	not Connoc	tion T	Vno														
Conne	action Type:	uon i	ype	онсе	~												
Conne	section type.			DITCP	•												
Static	: IP Settina	s															
Static	IP:							Net	tMask:								
Gatew	vay:							Lar	MTU:			150	0				
Duple:	x Mode:		4	Auto	~												
PPPoE	E Settings																
PPPoE	Login Nam	e:						PPF	PoE Login	Passwo	ord:						
PPPoE	Service Na	me:															
Optio	nal Networ	k Con	figuratio	on													
HostN	lame:		V	/E7LSE-F	PHONE	_		Do	main:								
Prima	ry DNS:					_		Sec	condary [DNS:							
DNS S	Server Order	r:	N	Manual,E	OHCP 🗸			Sys	slog Serv	er:							
Debug	g Server:					_		De	bug Leve	l:		3 🗸					
Layer	2 Logging:		r	10 💙				NT	P Enable:			yes	*				
Prima	ry NTP Serv	er:	c	a.pool.n	tp.org	_		Sec	condary I	VTP Ser	ver:						
Enable	e Bonjour:		r	10 💙				SS	L Key Ne	gotiatio	n:	RSA	~				
Enable	a 661929																

5. Click on Regional tab next. Match the setting that are highlighted. If we are in daylights savings time say yes, if not say no.

Feature Dial Services Codes:				
vertical Service Announceme	ent Codes			
Service Annc Base Number:				
Service Annc Extension Codes:				
Outhound Call Codec Selection	on Codes			
Prefer G711u Code:	*017110	Force G711u Code:	*027110	
Prefer G711a Code:	*017111	Force G711a Code:	*027111	
Prefer G722 Code:	*01722	Force G722 Code:	*02722	
Prefer G726r32 Code:	*01722	Force G726r32 Code:	*02722	
Prefer G720a Code:	*01720	Force G72032 Code:	*02720	
Fieler G729a Code.	01725	1010E G7298 Code.	02729	
Time				
Time Zone:	GMT-08:00 ¥	Time Offset (HH/mm):		
Ignore DHCP Time Offset:	yes 🗸			
Daylight Saving Time Rule:	start=3/-1/7/2;end=10/-1/7	2;save=1		
Daylight Saving Time Enable:	yes 🗸			
Language				
Dictionary Server Script:				
Language Selection:	English-US	Locale:	en-US 💙	
Miscellaneous				
DTME Playback Level:	-16	DTME Playback Length:	.1	
Inband DTME Boost:	12dB ¥	Show DTME Digits When Connected:	No ¥	
Inband Dinn Doost.	1200 .	Show Brinn Bigits when connected.		

Undo All Changes Submit All Changes

Attendant Console Status User Login basic | advanced

6. At this point, save your settings.

Click on the "Phone" Tab. Choose what you want your station name and display name to be. *97 is voicemail. Your line key 1 will be 1 and short name can be what you want your line 1 key to be called. This can be your call sign and the extension number you were assigned. You can also setup multiple phone lines attached to other PBX systems like Ham Shack Hotline etc. If you have that info for your other lines, you would add it into your "line key 2/ 3/ 4" settings.

۱۰ C	ııı ı Isco	•]	I P Ph Ci	i one sco Sy	SPA stems,	5250 Inc.	52				
Voice		Wi-Fi	Bluet	ooth	Personal	Addres	s Book		Call His	story	SI	peed Dials	Firmwa	re Upgrad	le
Info	System	SIP	Provisioning	Regional	Phone	Ext 1	Ext 2	Ext 3	Ext 4	Ext 5	User	Att Consol	e TR-069		
											Atter	ndant Console Stat	tus <u>User Login</u>	basic	advanced
Gener	ral														
Statio	n Name:			/E7LSE				Statio	n Displa	y Name:		VE7LSE			
Voice	Mail Numb	er:	1	•97											
BlueP	hone														
Blueto	oth Mode:		1	Phone 🗸	•			Line:				5	~		
Short	Name:							User F	Friendly	ID:					
PIN Co	ode:		3	********	***										
Line k	(ey 1														
Extens	sion:			1 💙				Short	Name:			VE7LSE 2	2202	_	
Share	Call Appea	arance	: 🧧 🚺	private 🗙											
Extend	ded Functio	on:													
Line k	(ey 2														
Extens	sion:		:	2 🗸				Short	Name:			VE7LSE 3	3302		
Share	Call Appea	arance	:	private 🗙											
Extend	ded Functio	on:													
Line k	(ey 3														
Extens	sion:			Disabled 🗸				Short	Name:			VE70DG	2201		
Share	Call Appea	arance	:	private 🗸											
Extend	ded Functio	on:	f	nc=sd+cp+l	olf;sub=22	01@\$PF	ROXY								

7. To program your spare line keys to act as speed dial buttons follow the highlighted settings as a template for your extra line keys. Note the extension numbers for the contacts you want to add by finding them in the local phone directory. <u>https://scarcs.ca/howto/aredn/voip</u> These numbers correspond with the entry you would make. The conference call number is 2400 as in the example. Save your settings.

Line Key 3			
Extension:	Disabled 🗙	Short Name:	VE70DG 2201
Share Call Appearance:	private 💙		
Extended Function:	fnc=sd+cp+blf;sub=2201@\$PROXY		
Line Key 4			
Extension:	Disabled 💙	Short Name:	VA7DXX 2203
Share Call Appearance:	private 🗸		
Extended Function:	fnc=blf+sd+cp;sub=2203@\$PROXY		
Line Key 5			
Extension:	Disabled 🗙	Short Name:	CONF 2400
Share Call Appearance:	private 🗸		
Extended Function:	fnc=blf+sd+cp;sub=2400@\$PROXY		

8. Click on the "EXT 1" Tab. Enter the Proxy seen here. Enter your Display name you want. Enter your extension number and password assigned to you. Save your settings. The phone will reboot. You should then see your line 1 key light up green and any of the speed dial keys light up green. If not check your settings again for any typos. If you need help troubleshooting, send an email over the <u>https://groups.io/g/Mid-Island-AREDN-Mesh-Network</u> and someone will help you out.

Proxy	10 246 225 227				
Outbound Proxy:	TOTE TOTE DIELE?				
Alternate Provy:					
Alternate Outbound Proxy:	0				
Use Outbound Proxy:	no. 🗙	Use OB Proxy In Dialog:	ves ¥		
Register:	ves 🗸	Make Call Without Reg:	no. ¥		
Register Expires:	3600	Ans Call Without Reg:	no ¥		
Use DNS SRV:	no. ¥	DNS SRV Auto Prefix:	no ¥		
Proxy Fallback Intyl:	3600	Proxy Redundancy Method:	Normal	~	
Dual Registration:	no 🗸	Auto Register When Failover:	no 🗸		
Subscriber Information					
Display Name:	VETISE	User ID:	2202		
Password:	*********	Use Auth ID:	no ¥		
Auth ID:		Reversed Auth Realm:	0		
Mini Certificate:		References Addi Realiti	Ū.		
SRTP Private Key:					
Resident Online Number		STD LIDT-			

9. Click "ATT Console" and match the highlighted setting.

ا، ا د	iii)i Isco	0					I	P Ph Cis	i one sco Sy	SPA: stems,	5250 Inc.	52				
Voice		Wi-Fi	ВІ	uetoo	oth	Personal	Addres	s Book		Call His	tory	Spe	eed Dials	Firmware U	pgrad	le
Info	System	SIP	Provision	ing	Regional	Phone	Ext 1	Ext 2	Ext 3	Ext 4	Ext 5	User	Att Console	TR-069		
												Attenda	int Console Status	User Login ba	asic a	advanced
Gene	ral															
Subsc	ribe Expire	s:		1800				S	ubscribe	Retry I	nterval:		30			
Unit 1	Enable:			yes *	~			S	ubscribe	Delay:			1			
Unit 2	Enable:			yes *	~			S	erver Ty	pe:			Asterisk	~		
Test M	lode Enabl	e:		no 🕚	~			A	ttendan	Consol	e Call Pic	kup Co	de: *8			
Attend	lant Conso	le Call	Park Code:	*68				A	ttendan	Consol	e Call un	Park Co	de: *88			
BLF Li	st URI:															
Use Li	ne Keys Fo	or BLF	List:	no 🕚	~			C	all Picku	p Audio	Notificat	tion:	no 💙			
Attend	lant Conso	le Fon	t Size:	10 🗸	•			A	ttendan	Consol	e LCD Co	ontrast:	12			
BXfer	To Starcod	le Enal	ole:	no 🕚	~			BXfer On Speed Dial Enable:					yes 🗸			
BLF La	abel Displa	y Mode	e:	Nam	e 🗸											

10. If you have an Attendance Console (sidecar) and would like to program the speed dial buttons, follow the example here. Make sure you change the extension number and the name for the contact you want to add. The printout for the SPA500S Sidecar can be found here:

https://scarcs.ca/howto/aredn/voip

Unit 1	
Unit 1 Key 1:	fnc=sd+cp+blf;sub=2222@\$PROXY;nme=VE7GEC-GAB-ECC-2222
Unit 1 Key 2:	fnc=sd+cp+blf;sub=2228@\$PROXY;nme=VE7UY-2228
Unit 1 Key 3:	fnc=sd+cp+blf;sub=2204@\$PROXY;nme=VE7TOP-2204
Unit 1 Key 4:	fnc=sd+cp+blf;sub=2205@\$PROXY;nme=VE7FAA-2205
Unit 1 Key 5:	fnc=sd+cp+blf;sub=2215@\$PROXY;nme=VE7GDE-2215
Unit 1 Key 6:	fnc=sd+cp+blf;sub=2207@\$PROXY;nme=VA7WPM-2207
Unit 1 Key 7:	fnc=sd+cp+blf;sub=2220@\$PROXY;nme=VE7KGV-2220
Unit 1 Key 8:	fnc=sd+cp+blf;sub=2218@\$PROXY;nme=VE7PMD-2218
Unit 1 Key 9:	fnc=sd+cp+blf;sub=2225@\$PROXY;nme=VA7FI-2225
Unit 1 Key 10:	fnc=sd+cp+blf;sub=2236@\$PROXY;nme=VE7KOD-2236
Unit 1 Key 11:	fnc=sd+cp+blf;sub=2235@\$PROXY;nme=VA7ILO-2235
Unit 1 Key 12:	fnc=sd+cp+blf;sub=2219@\$PROXY;nme=VA7MLZ-2219
Unit 1 Key 13:	fnc=sd+cp+blf;sub=2206@\$PROXY;nme=VA7MPG-2206
Unit 1 Key 14:	fnc=sd+cp+blf;sub=2211@\$PROXY;nme=VE7BEF-2211